



Infinite
Peripherals

DPP450

USER MANUAL



DPP450

CONTACT INFORMATION

Mobility Sales/Technical Center:

Infinite Peripherals, Inc.
1641 McGaw Avenue
Irvine, CA 92614
Toll Free: (866) 278-7860
Office: (949) 222-0300
Fax: (949) 222-0375

Headquarters/Main Warehouse:

Infinite Peripherals, Inc.
2312 Touhy
Elk Grove Village, IL 60004
Toll Free: (800) 278-7860
Phone: (847) 818-1260
Fax: (847) 818-1287

Technical Support:

Infinite Peripherals, Inc.
1641 McGaw Avenue
Irvine, CA 92614
Toll Free: (866) 278-7860
Office: (949) 222-0300
Fax: (949) 222-0375
Email info@ipcprint.com
ipcprint.com



**Infinite
Peripherals**

LEGAL NOTICE



The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. and any use of such marks by Infinite Peripherals is under license.

CONTENTS

Compatability	Error! Bookmark not defined.
Overview	3
Technical Data	4
Box Contents	5
Getting Started	6
About Your DPP-450	7
Standard Paper Loading	8
Label Paper Loading	9
Status and Operational Modes	10
Charging Your DPP-450	11
Replacing Battery	12
Belt Clip Assembly	13
Self-Test	14
Long-Test	15
Hardware Setup	16
Configuration Menu Options	17
Diagnostic Information	19
Developing Solutions	20
Protocol Mode	21
Resident Command Set	23
Troubleshooting	25
Dimensions	26
Federal Communications Commission	27

OVERVIEW

DPP-450 is a mobile ESC/POS and LABEL thermal printer. It can be used in dynamic working conditions and its abundant built-in features allow it to be widely used for different applications. The printer can quickly and easily print text and/or graphics, depending on customer's needs – barcodes, logo, etc.

Features:

Fast Mobile Printing:

150mm per second (~6 inches per second)

Battery:

Rechargeable Li-ion Battery – (2200) mAh
Charging – approximately 3 hours maximum

Logo Registration:

Store and retrieve 1 Black & White graphics image (832 x 248)
Dots size

Communication Interface:

Optional: Bluetooth®, USB 1.1, Wi-Fi, RS232C

Thermal Media:

Standard Direct Thermal Rolls
Index Direct Thermal Rolls (Labels)

Adjustable Paper Width:

Adjustable paper well (2-inch up to 4-inch) width

Label Peeler:

Automatic label peeler

TECHNICAL DATA

General Specifications:

Printing Method	Line Thermal Dot Printing	
Total Dots	832 dots / line	
Dot Density	8 dots / mm (203 dpi)	
Print Speed	150 mm / sec	
Print Width	104 mm	
Characters per Line	Font A: 48 characters / line Font B: 64 characters / line	Font C: 48 characters / line (Loadable) Font D: 64 characters / line (Loadable)
Recommended Paper	Thermal Paper Roll: 115 mm / Ø 45 mm, thickness 60 µm Label Paper Roll: 115 mm / Ø 45 mm	
Interface	RS-232C with optional special cable (1200 - 115200 bps) USB 1.1 device Bluetooth® (option) Wi-Fi (option)	
Paper Feed system	Step	
Logo Registration	1 Black & White 832 x 248 dots	
Emulation	ESC/POS / LABEL (Continuous paper Mode, Black Mark Mode)	
Resident Barcodes	1D: EAN13, EAN8, UPC-A, UPC-E, Codabar, Code 39, Code 128 2D: PDF417, QR Code	
Power Supply	Rechargeable battery (Li-Ion - Model) 14.8V; 2200 mAh Adapter: AC 100-240V, DC 24V 5A	
Battery Charge Time	3 hours maximum	
Input Buffer	128 KB (131072 bytes)	
Reliability	50,000,000 pulses or 50 km mechanism (MCBF): 15,000,000 lines	
Weight, kg	785 grams (without paper)	
Dimension (L x W x H) mm	136x 123 x 51	
Environment	Operating: 0°C to +40°C; 35% RH to 85% RH Storage: -20°C to +60°C; 10% RH to 90% RH	

Table 1

* Specifications subject to change without notice.

BOX CONTENTS

Your DPP-450 comes with the following items listed below:


Item	Part Number	Descriptions	Image
1	DPP-450 - Base version RS232/USB DPP-450BT - Base version plus BlueTooth DPP-450W - Base version plus WiFi DPP-450BTW - Base version BlueTooth + WiFi	Mobile Thermal Printer	
2	Contact Sales	Belt Clip	
3	Contact Sales	Shoulder Strap	
4	Contact Sales	Power Supply	
5	Contact Sales	Sample Paper Roll	

Table 2

Software (Drivers & SDK):

Because of the continually evolving SDK, the latest Drivers & SDK are not distributed on CD.

For the latest DPP-450 Drivers & SDK's, please visit our download area:

<http://www.ipcprint.com/>

GETTING STARTED

The DPP-450 allows you to print from your mobile device using various communication methods. Before using your DPP-450 the battery should be properly charged. The following Quick Start guide will help to get your DPP-450 ready for use.

Quick Start:

Step	What to do	Purpose	Where to find more information
1	Fully charge your DPP-450 as recommended	The battery pack should be fully charged before use to ensure long battery life	Charging Battery, Page 11
2	Install Software	Printing requires software to be installed onto your mobile device	Please contact your IPC Sales Representative
3	Configure device to connect to DPP-450	Connecting your DPP-450 to mobile device	Page 16

Table 3

ABOUT YOUR DPP-450

1. Power Button
2. Print Button
3. Paper Feed Button
4. Battery Location
5. USB / RS232C Port
6. Paper Cover
7. Paper Cover Latch

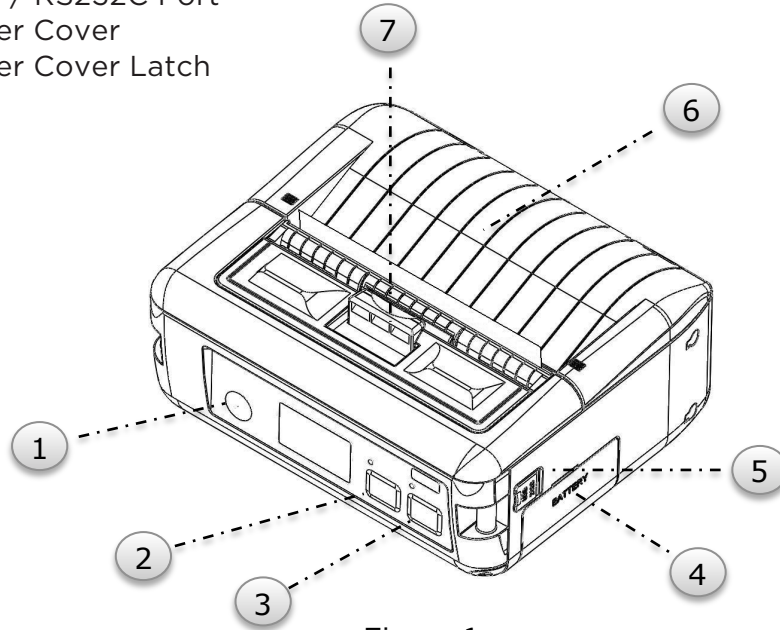


Figure 1

8. Battery Charging Jack


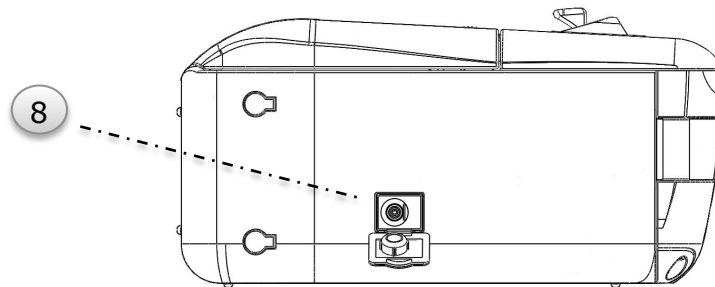


Figure 2

STANDARD PAPER LOADING


1. Push lever in the direction of the arrow to open paper cover.

Figure 3

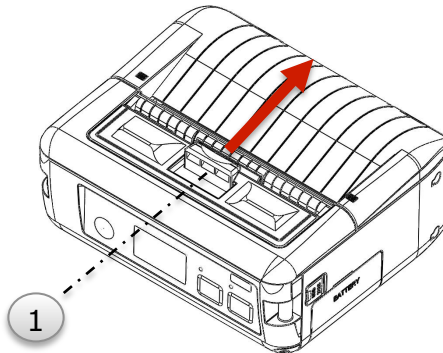


2. To set paper size – pull up green lever and slide right for small paper or left for wider paper.

Figure 4

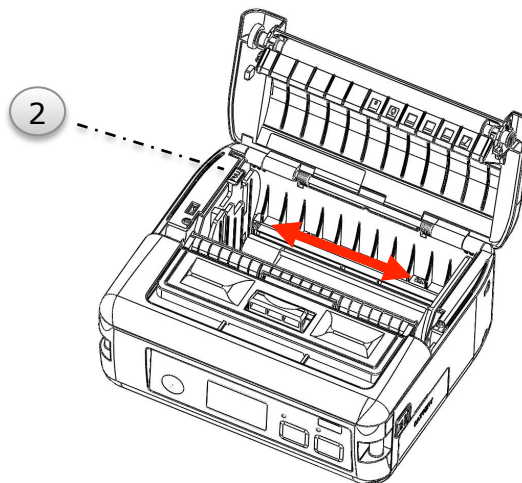

3. Drop in new paper roll with about ½ fold over the front of the printer as shown in the figure below then close the paper cover securely.


Figure 5

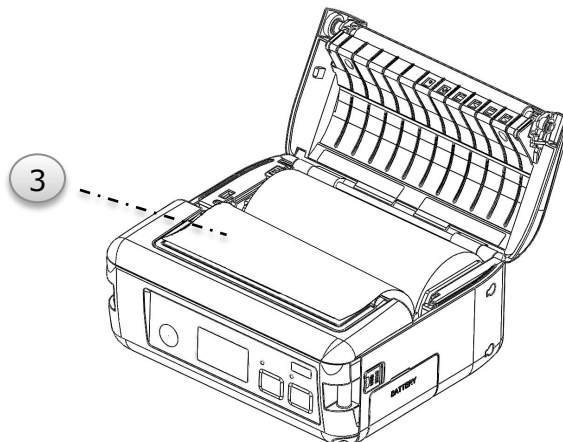

LABEL PAPER LOADING


1. Push lever in the direction of the arrow to open paper cover.

Figure 6

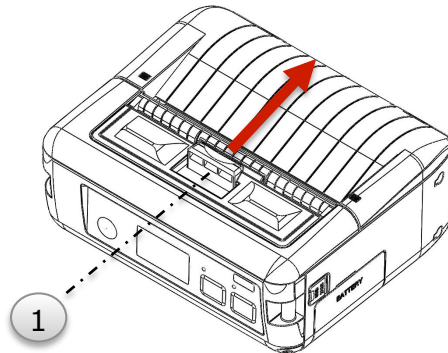


2. Slide peeler in the direction of the arrow below.

Figure 7

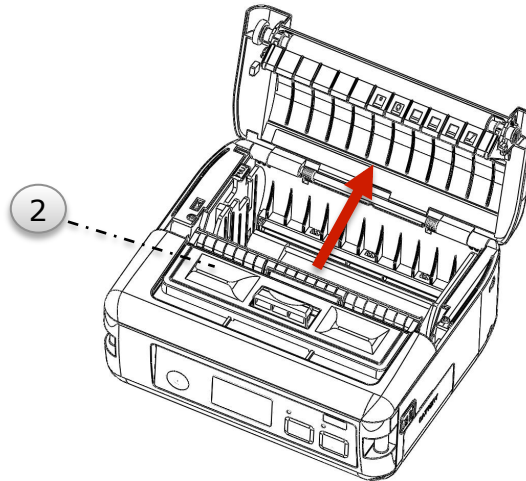

3. Thread label through the peeler as shown in the figure below then close the paper cover securely.

Figure 8

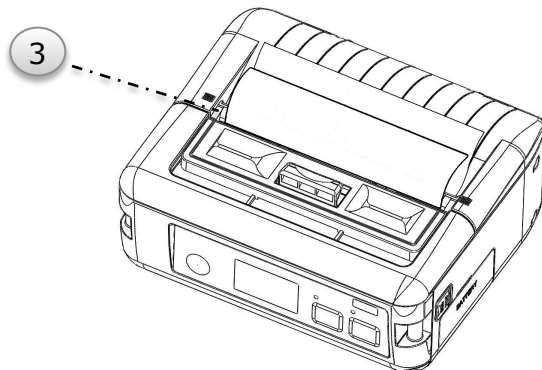

STATUS AND OPERATIONAL MODES

The DPP-450 uses LEDs to indicate various conditions of operation. This may be charging, active or online, battery low conditions. The following explains these conditions and LED indication.





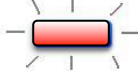
LED		Status
CHARGE		Solid indicates battery charged.
		Flashing indicates charging.
STATUS		Off indicates printer ready.
		Solid indicates paper empty.
		Flashing indicates error.

Table 4

1. LED location shown below.

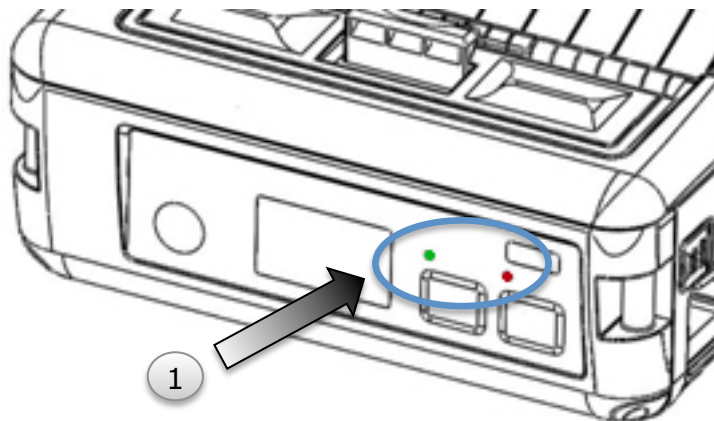


Figure 9

CHARGING YOUR DPP-450

The DPP-450 uses a Lithium Ion rechargeable battery pack. Before first use, the battery pack should be charged for at least (3) hours from full empty.

To prevent electrical damage to the DPP-450 and/or battery pack, please use approved AC adaptors cables only.

1. Connect 24V charger cable to the DC charging jack as shown below. Insert cable to DC jack to start charging.
2. When the device is turn on (holding turn on/off button), the LCD display will show “CHG” text and a green led “CHARGE” is blink.

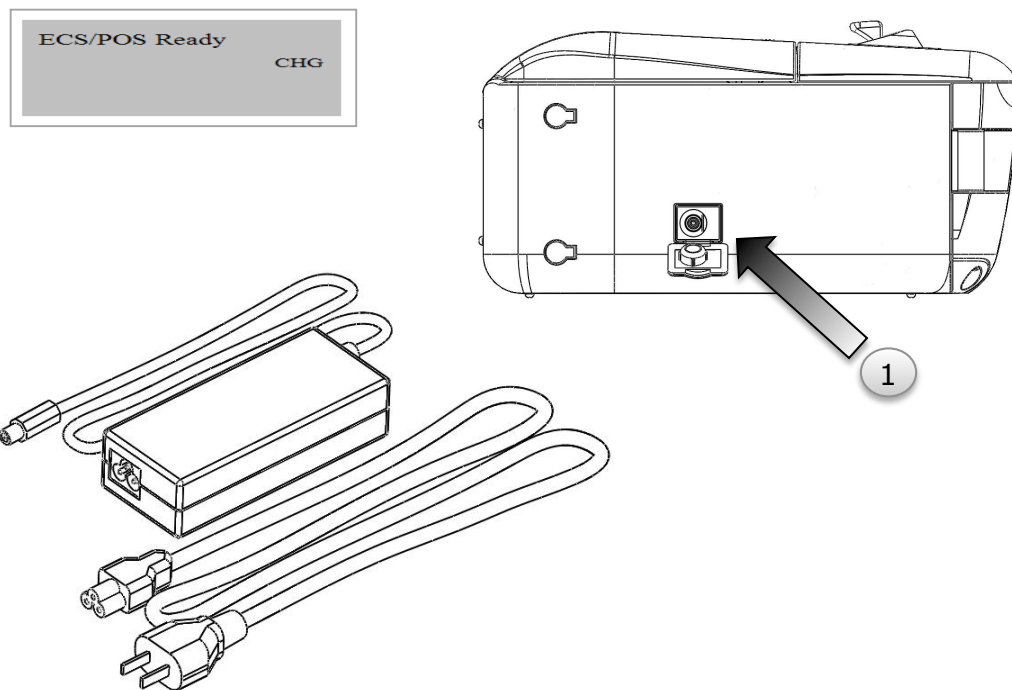


Figure 10

Warning:

- When charging the DPP-450, only use the approved/recommended 24 volt @ 5 amp dc adaptors. Failure to do so may cause charging problems and potential damage to the DPP-450.
- When connecting the DC charging cable, take care as to not force the plug into the connector as doing so may cause damage to the connector.

REPLACING BATTERY

To replace the battery in the DPP-450 thermal printer follow the steps below.

1. Open the battery cover as shown in the figure below:

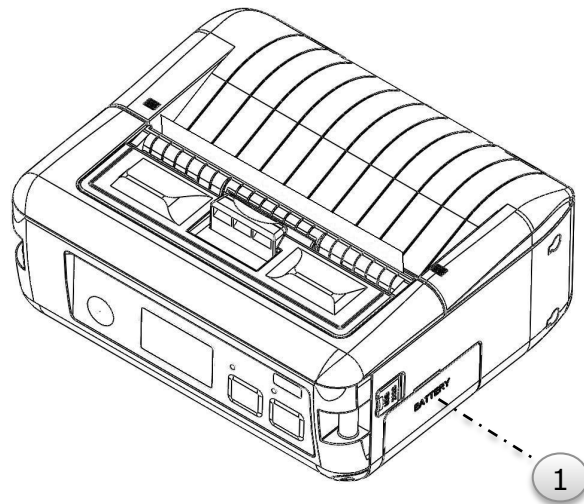


Figure 11

2. Slide locking lever to release battery as shown in the figure below:

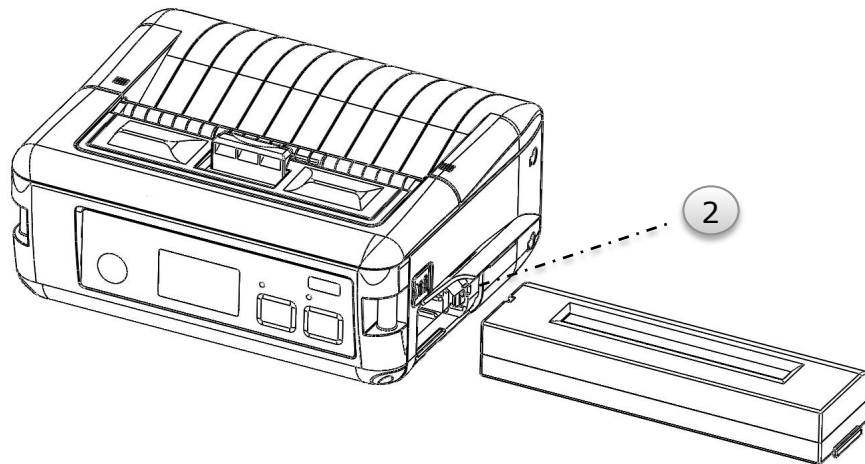


Figure 12

Tips:

Disconnect all cables including AC adaptor and turn off the DPP-450 printer before attempting to remove the battery.

BELT CLIP ASSEMBLY

The DPP-450 is designed to be worn on the belt using belt clip accessory. To assembly the printer and belt clip, follow the steps below.

1. Attach the belt clip to the base of the DPP-450 as shown below.

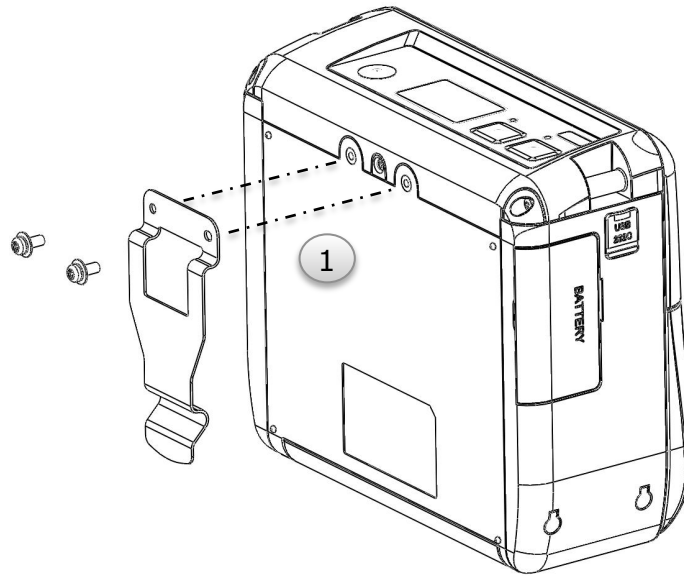


Figure 13

Caution:

- When securing the belt clip to the DPP-450 printer, use only the supplied screws to prevent damage to the printer.
- Failure to use the recommended screws may not securely fasten belt clip to printer and cause the printer to separate from belt clip.

SELF-TEST

The DPP-450 has a built-in test pattern that shows the printer's current configuration as well as the various resident printer fonts. The self-test can also be used as a troubleshooting tool to determine printing problems or battery level. The steps below show how the self-test is printed activated.

- Holding <LF> button while power on for ~ 0.5 seconds (first beep) sound signals the short self-test will be printed as shown in the figure on the right.



Figure 14

LONG-TEST

- Holding <LF> button for ~ 5.5 seconds (third beep) while powering on the DPP-450 will signal the long-test will be printed as shown in the figure on the right.

- Resident font sizes
- Characters per line
- Text formatting
- Resident character set
- Resident barcode symbols
- Printer's configuration



Figure 15

HARDWARE SETUP


- Holding the <ON/OFF> button while power on the DPP-450 printer for more than 6 seconds will enter hardware setup mode. The “STATUS” (red led) will blink once and DPP-450 will print the message in the figure below:

Figure 16




- While in hardware setup mode, press <FEED> button to enter Hardware menu options. The DPP-450 will print the current saved settings.

Figure 17

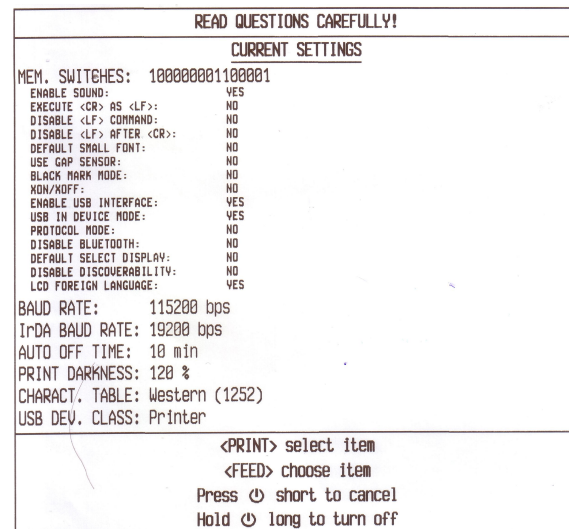

- The figure below show the LCD in hardware configuration menu:

Figure 18

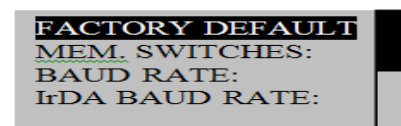

- Use the <PRINT> button to move down and use the <FEED> button to select selected.

CONFIGURATION MENU OPTIONS

- **FACTORY DEFAULT**
 - YES
 - NO
- **MEMORY SWITCHES:**
 - **ENABLE SOUND** Enable/Disable printer's buzzer
 - **EXECUTE <CR> AS <LF>** Disable CR/CR is executed as LF
 - **DISABLE <LF> COMMAND** Enable/Disable LF
 - **DISABLE<LF>AFTER** Disable LF immediately after CR
 - **DEFAULT SMALL FONT** Set the small font as default
 - **USE GAP SENSOR** Enable/Disable the GAP sensor
 - **BLACK MARK MODE** Enable/Disable the black mark sensor
 - **XON/XOFF** Enable/Disable XON/XOFF protocol
 - **ENABLE USB INTERFACE** Enable/Disable USB communication port
 - **USB IN DEVICE MODE** Changing the USB HOST/DEVICE mode
 - **PROTOCOL MODE** Enable/Disable Protocol mode
 - **DISABLE BLUETOOTH *** Enable/Disable Bluetooth® communication
 - **DEFAULT SELECT DISP** Set the main display as default
 - **DISABLEDISCOVERABILITY** Enable/Disable printer's discoverability
- **LCD FOREIGN LANGUAGE**
- **DISCARD** - Exit without saving configuration
- **ACCEPT** - Exit with saving configuration
- **BAUDRATE** - Changing the printer communication speed (RS)
 - 115200 bps
 - 38400 bps
 - 31200 bps
 - 2400 bps
 - 4800 bps
 - 9600 bps
 - 19200 bps
 - 57600 bps
- **IrDA BAUD RATE** - Changing the IrDA communication speed
 - 19200 bps
 - 9600 bps
 - 38400 bps
 - 57600 bps
 - 115200 bps
- **AUTO OFF TIME** - Changing the printer's auto OFF time
 - 10 min.
 - 15 min.
 - 20 min.
 - 30 min.
 - 45 min.
 - 60 min.
 - 0 min.
 - 2 min.
 - 5 min.

-
- PRINT DARKNESS - Changing the printing darkness
 - 120 %
 - 140 %
 - 160 %
 - 60 %
 - 75 %
 - 90 %
 - 100 %
 - CHARACTER TABLE - Changing the printer's character table
 - Western (1252)
 - CE (1250)
 - Turkish (1254)
 - Baltic (1257)
 - Cyrillic (1251)
 - Greek (1253)
 - Hebrew (1255)
 - Katakana
 - Arabic
 - Arabic (1256)
 - Arabic (1256A)
 - Arabic (1256F)
 - Thai (874)
 - VISCII
 - English (437)
 - Latin 1 (850)
 - Portuguese (860)
 - Lithuanian
 - Latin 2 (852)
 - Polish
 - Turkish (857)
 - Baltic (775)
 - Bulgarian (856)
 - Russian (866)
 - Latvian
 - Greek (737)
 - Hebrew (862)
 - PAIRING INFO - Resetting pairing info
 - Enable/Disable saving pairing info
 - Disable authentication
 - Change pairing info
 - Save pairing info
 - USB DEV. CLASS - Changing the USB device class of the printer
 - Printer
 - Serial
 - SAVE & EXIT MENU

DIAGNOSTIC INFORMATION

The DPP-450 has several built-in diagnostic modes.

- Holding <LF> button while power on for ~ 0.5 sec (first sound signal) – short self-test.
- Holding <LF> button while power on for ~ 2.5 sec (second sound signal) – start dump mode. All input data are printed hexadecimal and as text.
- Holding <LF> button while power on for more than 8.5 sec (fifth 4-tone sound signal) – enter firmware updating mode.
- Holding <ON/OFF> button while power on for ~ 4 sec (first sound signal).
 - If serial cable is connected (RS232 communication) – temporary forcing 9600 bps serial speed.
 - If no serial cable connected (Bluetooth® or USB communication) – starting a hardware menu for fast Bluetooth® pairing info reset.
- Holding <ON/OFF> button while power on for more than 6 sec – enter hardware setup mode.
- Holding <ON/OFF> button while power off for more than ~ 1sec.
- Holding <ON/OFF> button while less than ~ 1sec, backlight is turn on for short time.
- Holding <ON/OFF> button and press <LF> button – printing WIFI info.

DEVELOPING SOLUTIONS

Integrating the DPP-450 into your mobile solution requires the use of the DPP-450 PDA & Smartphone SDK. The SDK incorporates API specific to developing printing applications and using the capabilities of the DPP-450 mobile printer.

The table below shows the SDKs currently available for PDA & Smartphone devices.

OS	Language	SDK - IDE
BlackBerry	Java	RIM BlackBerry Java JDE 4.1 and higher
Android	Java	Eclipse
Windows & Windows Mobile	VB.Net	Microsoft Visual Studio (.Net)
	C ++	Microsoft Visual Studio (.Net)
	C Sharp	Microsoft Visual Studio (.Net)

Table 5

For details on using the DPP-450 SDK, please refer to the SDK's documentation.

For the latest DPP-450 SDK's, visit our developer web site at:

<http://www.ipcprint.com/support/default.asp>

Tips:

If you are not sure of what SDK is needed, please contact your Infinite Peripherals sales or technical support representative.

PROTOCOL MODE

Protocol mode is active when hardware switch 11 is on. The purpose of this mode is to give stronger real time access to the printer. All input data are sent in packets as described below. The printer returns an answer to the packet immediately.

Output packet format: Channel Command LenHi LenLo Data

Answer format: Channel Status LenHi LenLo Data

Channel: One byte:

Bits 0 – 6 Channel number (Device type)

Bit 7: 0: Send data; 1: Response

Command: One byte with possible value:

- 0: Open channel (No action – all channels always open)
- 1: Close channel (No action – all channels always open)
- 2: Send data
- 3: Request data
- >4: Application specific

Status: One byte:

	0	1
Bit 0	No error	Error occurred
Bit 1	ACK (Packet accepted)	NACK (Packed not accepted)
Bit 2	Channel and command OK	Wrong channel or command
Bit 3	Battery OK	Low battery
Bit 4	Printing head OK	Printing head too hot
Bit 5	Paper OK	Out of paper
Bit 6	Not defined	
Bit 7	Printer ready	Printer busy

Table 6

Bit 7 is set, if:

- There are unprinted lines in the print buffer.
- There are bytes in the print buffer.
- The printer is executing a macro.
- The printer is executing selftest.
- The button <LF> is pressed – feeding paper.

LenHi: High byte of data length of data. 00h to 08h.

LenLo: Low byte of data length of data. 00h to FFh.

Data: 256*LenHi + LenLo data bytes.

The maximum packet length is 2048 bytes.

The answer differs from the command by bit 7 (MSB) in the channel number. If bit 7 is 0 then it is a command, if it is 1 then it is a response. Bit 0 in the status byte shows if there was an error accepting or processing the data block. If this bit is 1 the other bits show the type of the error. The printer never issues a transmission by itself. It always responds as an answer to a command.

The communication goes like this:

Host – command, Printer – answer; Host – command, Printer – answer; etc.

The defined channels are:

- 1Printer.
- 16 (10h) Optional card reader.

Commands for the printer channel (1):

- Command 2 - Send data

The data is copied into the printer's print buffer. If there's not enough space into the print buffer the packet is rejected, and a status byte with value 3 is returned in the answer.

- Command 3 - Receive data

If there is data to be transmitted from the printer to the host, it is transmitted in the data field of the packet, otherwise an empty packet is received. The application must take care to get the data fast enough from the output buffer or the data may be corrupt.

- Command 4 - Get printer status. 5 data bytes returned in response:
 - BufferHi BufferLo PrStatus Volt Temperature
 - BufferHiHigh byte of the count of free bytes in input buffer.
 - BufferLo Low byte of the count of free bytes in input buffer.
 - PrStatusPrinter status. The following bits defined:
 - Bit 0 Battery low
 - Bit 1 Too hot
 - Bit 2 No paper
 - Volt - The battery voltage in units 0.1V
 - Temperature - The head temperature in degrees Celsius.

If free bytes in input buffer are more than 65535 (FFFFh), then FFFFh is returned.

Using channel 16 is the only way for full control over the optional card reader.

Communication example (all bytes hexadecimal):

- Send data:
 - >>>01 02 00 05 11 22 33 44 55
 - <<<81 00 00 00
- Send data with error:
 - >>>01 02 00 05 11 22 33 44 55
 - <<<81 01 00 00
 - >>>01 02 00 05 11 22 33 44 55
 - <<<81 01 00 00
 - >>>01 02 00 05 11 22 33 44 55
 - <<<81 00 00 00
- Receive data:
 - >>>01 03 00 00
 - <<<81 00 00 00
 - >>>01 03 00 00
 - <<<81 00 00 04 11 22 33 44
 - >>>01 03 00 00
 - <<<81 00 00 00
- Get status:
 - >>>01 04 00 00
 - <<<81 00 00 05 3F F8 01 49 27

RESIDENT COMMAND SET

1	BEL	Sounds the buzzer
2	HT	Horizontal Tab command configuration flags 2, 3 and 4
3	LF	Printing a line and Paper Feeding command
4	FF	Printing and paper feeding to the black mark position
5	CR	The operation of the command depends on the state of the
6	DC2 =	Image LSB/MSB select
7	DC3	(DC3 (Ruled line) commands sequence start
8	DC3 +	Sets the ruled line ON
9	DC3 -	Sets the ruled line off
10	DC3 A	Selects ruled line A
11	DC3 B	Selects ruled line B
12	DC3 C	Clears selected ruled line buffer
13	DC3 D	Sets a single dot in selected ruled line buffer
14	DC3 F	Ruled line pattern set
15	DC3 L	Ruled line line set
16	DC3 M	Selects ruled line combine mode
17	DC3 P	Ruled line 1 dot line print
18	DC3 p	Ruled line n dots line print
19	DC3 v	Ruled line image write
20	CAN	Canceling print data in page mode
21	ESC FF	Printing data in page mode
22	ESC RS	Sounds the buzzer
23	ESC SP	Setting character spacing
24	ESC #	Setting EURO symbol position
25	ESC \$	Specifying the absolute horizontal position of printing
26	ESC %	Selecting/Canceling the printing of downloaded user character sets
27	ESC &	Selecting user character set
28	ESC !	Specifying printing mode of text data
29	ESC *	Printing graphical data
30	ESC +	Switchs OFF the printer
31	ESC -	Selecting/Canceling underlining
32	ESC .	Printing self test/diagnostic information
33	ESC 2	Specifying 1/6-inch line feed rate
34	ESC 3	Specifying line feed rate n/203 inches
35	ESC <	Changes print direction to opposite
36	ESC =	Data input control
37	ESC >	Selecting print direction
39	ESC @	Initializing the printer
40	ESC CAL	Black mark mode sensor calibration
41	ESC D	Setting horizontal tab position
42	ESC E	Specifying/Canceling highlighting
43	ESC F	Filling or inverting the page area in page mode
44	ESC G	Specifying/Canceling highlighting
45	ESC I	Specifying/Canceling Italic print
46	ESC J	Printing and Paper feed n/203 inches
47	ESC L	Selecting page mode
48	ESC N	Reading programmed serial number
49	ESC R	Selecting country
50	ESC S	Specifying speed (bps) of the serial port
51	ESC T	Printing short self test
52	ESC U	Selecting/Canceling underlined printing
53	ESC V	Selecting/Canceling printing 90°- right turned characters
54	ESC W	Defining the print area in page mode
55	ESC X	Specifying max printing speed
56	ESC Y	Selecting intensity level
57	ESC Z	Returning diagnostic information
58	ESC \	Specifying relative horizontal position
59	ESC]	Loading the default settings stored in Flash memory
60	ESC ^	Saving current settings in Flash memory

61	ESC _	Loading factory settings
62	ESC `	Reading the Battery Voltage and Thermal head temperature
63	ESC a	Aligning the characters
64	ESC b	Increasing text line height
65	ESC c5	Enabling/Disabling the functioning of the button LF
66	ESC d	Printing and feeding paper by n- lines
67	ESC i	Feeding paper backwards
68	ESC o	Temporarily feeding paper forward
69	ESC pair=	Enabling/Disabling PAIRING info saving in Bluetooth® mode
70	ESC pwd=	Programming a new Bluetooth® password (PIN)
71	ESC r	Full command for sounding buzzer
72	ESC s	Reading printer settings
73	ESC u	Selecting code table
74	ESC v	Transmitting the printer status
75	ESC x	Setting the time interval for automatically switching Off the printer
76	ESC y	Setting USB response strings
77	ESC {	Enabling/Canceling printing of 180° turned characters
78	GS FF	Printing in page mode and returning to standard mode
79	GS \$	Specifying the absolute vertical position in page mode
80	GS)	Setting printer flags (memory switches)
81	GS *	Defining a Downloaded Bit Image (logo)
82	GS /	Printing a Downloaded Bit Image
83	GS :	Starting/ending macro definitions
84	GS B	Enabling/Disabling inverse printing (white on black)
85	GS C	Read the Real Time Clock
86	GS H	Selecting printing position of HRI Code
87	GS L	Setting the left margin
88	GS Q	Printing 2-D barcodes
89	GS R	Filling or inverting a rectangle in page mode
90	GS S	Selecting 2-D barcode cell size
91	GS T	Selecting the print direction in page mode
92	GS U	Selecting standard mode
93	GS W	Setting the print area width
94	GS X	Drawing a rectangular box with selected thickness in page mode
95	GS Z	Printing the non blank page area only in page mode
96	GS \	Specifying the relative vertical position in page mode
97	GS ^	Executing macro
98	GS c	Setting the Real Time Clock
99	GS f	Setting the font of HRI characters of the barcode
100	GS h	Setting the height of the barcode
101	GS k	Printing a barcode
102	GS p	Settings for 2D barcode PDF417
103	GS q	Selecting the height of the module of 2D barcode PDF417
104	GS w	Selecting the horizontal size (Scale factor) of the barcode
105	GS x	Direct text print in page mode
106	FS !	Specifying printing mode of two-byte text data
107	FS &	Selecting two-byte text mode (JIS or GB2312)
108	FS -	Selecting/Canceling underline mode for two-byte text mode
109	FS .	Canceling two-byte text mode
110	FS C	Selecting Shift-JIS mode (Japanese version only)
111	FS S	Specifying character spacing for two-byte text mode
112	FS W	Selecting double size characters for two-byte text mode
113	ESC y WAN	WAN

Table 7

Tips:

See “DPP-450_Programmers_Manual” for command details.

TROUBLESHOOTING

If you are having problem printing refer to the table below for possible causes.

Item	Problem	Possible Cause
1	Paper feeds after issuing a print job but no printed text visible on paper.	Thermal media is specially coated on outside of roll. Remove paper roll and reload properly. See section "Loading Paper" for details on loading paper.
		Paper cover not installed properly. See section "Loading Paper" for details on replacing paper cover.
2	Status LED on RED continuously.	Paper not properly loaded. Press FEED button.
		Printer out of paper or Paper not properly loaded. See section "Loading Paper" for details on loading paper.
3	Text and/or graphics are printed very light.	Battery voltage low. See section on charging battery pack.
		Thermal media not imaging correctly. Verify that you are using the recommended thermal media.
4	Strange characters are printed when printing.	Battery voltage low. See section on charging battery pack.
5	Printer stops responding to print and paper feed commands.	Remove battery for 5 seconds and reconnect battery.
6	Printing is light or missing only on half of the print width.	Paper cover not properly installed. See section on loading paper.
		Mechanism jarred loose. Contact technical support.

Table 8

DIMENSIONS

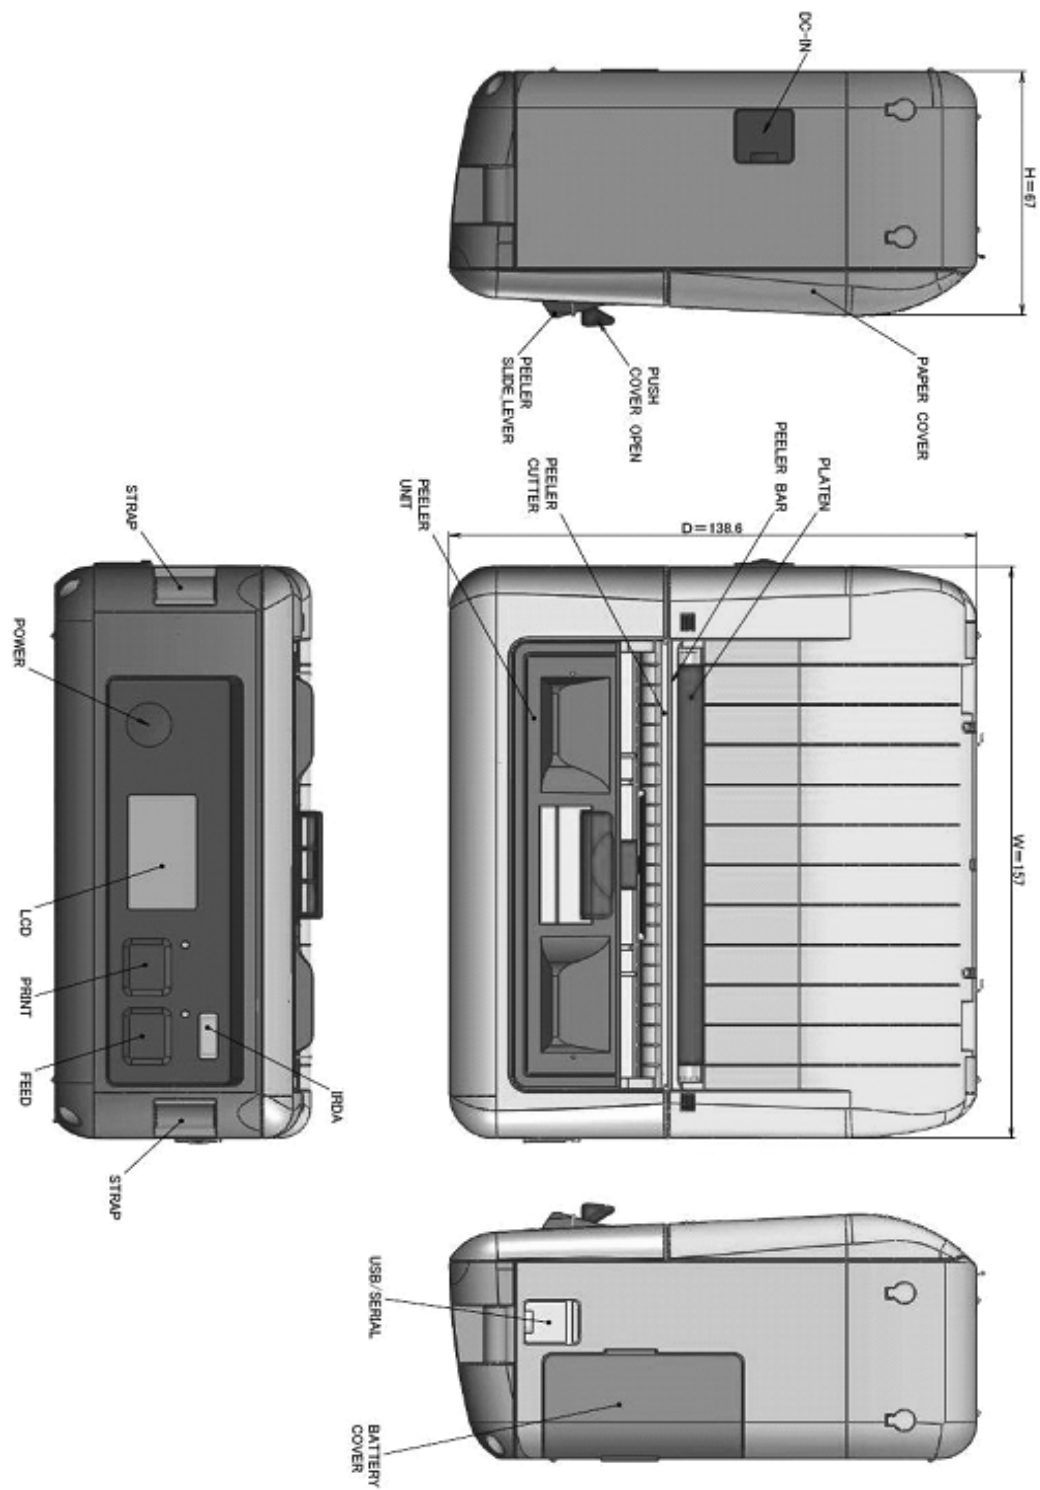


Figure 19

FEDERAL COMMUNICATIONS COMMISSION

Federal Communications Commission (FCC) Statement

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.